



Toshiba Excite 7c Motherboard Replacement

This guide will show you how to replace the logic board on a Toshiba Excite 7c.

Written By: Adam Burdzel



INTRODUCTION

This guide will show you how to replace the motherboard on your Toshiba Excite 7c. The logic board should only be replaced as a last ditch effort, as it is usually something else wrong first, unless there is visible damage.



TOOLS:


- [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Motherboard



- To open your device use the plastic opener. Locate the seam on your device and gently separate, applying pressure down all four sides.
- The back casing will start to peel away from the screen.
- Carefully lift and remove the back panel with tablet lying face down on a table. This will reveal the back side.

Step 2

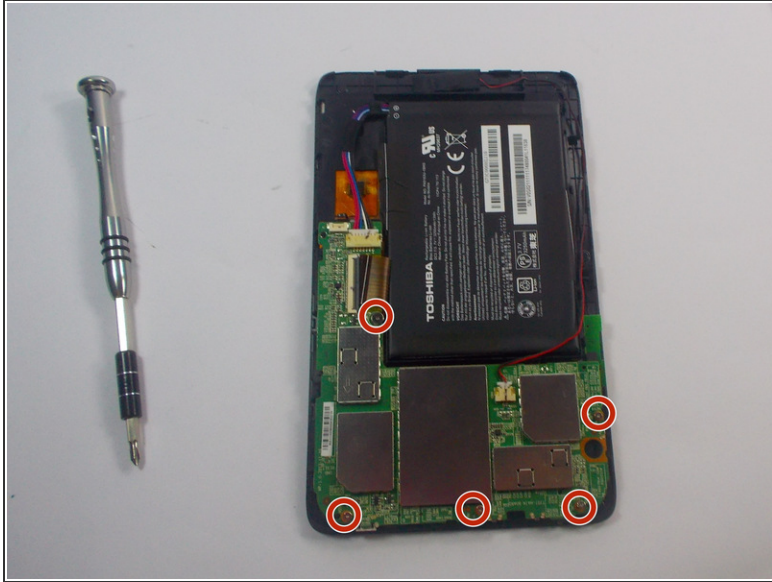

- Using a screw driver unscrew the five 6mm phillips head screws on the motherboard
- Gently remove the two wiring connectors with tweezers.
- Pull straight up to remove the board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-07 05:12:41 PM.